 


UK SKU: CF00140

EU SKU: CF00140E

www.decotel.com

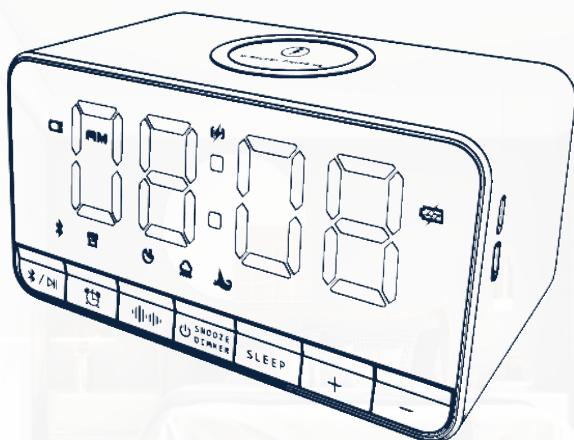

INSTRUCTIONS

Estrella Radio Alarm Clock

Réveil Radio
Radiowecker
Radio Despertador

decotel
Delivering Excellence
in Hotels & Hospitality

Please read these instructions carefully before use

Content

03 – 09 EN - Instructions for use



Features

Power: AC 100-240V,50/60Hz,DC 9V 2A

Dimensions: 150 x 80 x 70mm

Charging: 15W Fast Wireless

Port: 1 x USB, 1 x Type-C

Bluetooth Distance : 10m

 
Built-In Battery: 1200mha Lithium

Compatible: Ipads and all other Phones

LED Digital Dimmable Display Screen

Functions: Bluetooth Music / Snooze /
White Noise

Details

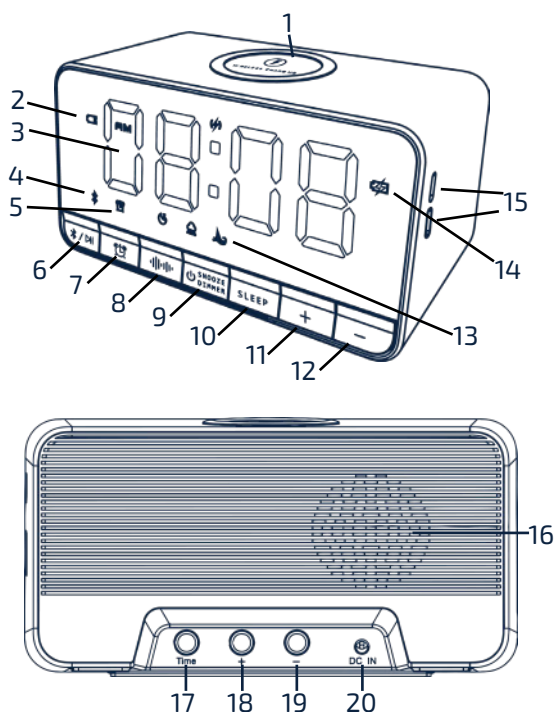

- | | |
|---------------------------|-----------------------------|
| 1. wireless charging zone | 11. +button (time/volume) |
| 2. battery level/charging | 12. -button (time/volume) |
| 3. am/pm | 13. white noise icons |
| 4. bluetooth | 14. type-c charging display |
| 5. alarm/snooze/sleep | 15. type-c and USB charging |
| 6. bluetooth button | 16. speaker |
| 7. alarm button | 17. time setting button |
| 8. sleep button | 18. time setting +button |
| 9. on-off/snooze/dimmer | 19. time setting -button |
| 10. timed sleep button | 20. dc 9v 2a max |

Instructions

1. Introduction

Thank you for choosing the Decotel Estrella Radio Alarm Clock. This multifunctional clock includes radio, Bluetooth, USB-C charging, white noise, and wireless charging capabilities.

Please read this manual carefully before use and retain it for future reference.

2. Before First Use

- Unpack the unit carefully. Check all accessories are included.
- Plug in the power adaptor (9V/4A max) to begin using the device.
- Familiarise yourself with button functions before setting the clock.
- The unit can operate via mains power or battery. For full functionality, including wireless charging and USB-C output, mains power is required.

3. Important Safety Notes

- Use only the original power adaptor supplied.
- Keep the device away from water and damp environments. Suitable for indoor, dry locations only.
- Do not open, disassemble, or modify the unit.
- Avoid placing the device near heat sources, direct sunlight, strong magnetic fields, or high-humidity areas.
- Do not bend, cut, or place items on the power cord.
- Unplug the device during thunderstorms or when not in use for extended periods.
- Use only recommended accessories and parts.
- Do not use the unit if it emits smoke, an unusual smell, or shows visible damage.
- Avoid impacts, drops, and vibrations. This may cause data loss or functional issues.
- Never store or use the device in dusty, wet, or high-temperature environments.
- Not suitable for use above 2000m altitude or in tropical climates.

Instructions

5. Operating Instructions

5.1 Power On/Off

- When connected to mains, the display lights up at full brightness by default.
- In battery mode, the display dims automatically.
- To power off, press and hold the power button for 3 seconds. Repeat to power on.

5.2 Setting the Time

- Press the TIME button on the rear.
- Use + / - to select 12-hour or 24-hour mode. Press TIME to confirm.
- Hour will blink – adjust with + / -, press TIME to confirm.
- Minute will blink – adjust with + / -, press TIME to confirm.
- The clock exits time-setting mode after 5 seconds of inactivity.

5.3 Setting the Alarm

- Press the alarm button beneath the display to activate the alarm. Default is 07:00.
- Press and hold the alarm button to enter alarm setting. Time will blink.
- Use + / - to set minute and hour, then confirm.
- The alarm icon will show when set. Alarm repeats daily.

5.4 Turning Off the Alarm

- Press the alarm button during ringing to stop it.
- To deactivate an upcoming alarm, press the alarm button twice within 5 seconds.

5.5 Snooze Function

- When the alarm rings, press the snooze button. Alarm reactivates after 9 minutes.
- Long press the snooze button to cancel the snooze.
- Press once to stop snooze; press again to disable alarm for 24 hours.

Instructions

5.6 Alarm Volume and Ringtone

- Alarm begins at low volume and increases over 20 seconds.
- The ringtone is built-in and not customisable.
- In Bluetooth mode, the alarm will stop music playback.

5.7 Sleep Timer

- Press the timer button during Bluetooth music to enter Sleep Mode.
- Repeatedly press to cycle between 90 / 75 / 60 / 45 / 30 / 15 minutes or OFF.
- Timer will auto-confirm after 5 seconds.

5.8 Bluetooth Mode

- Press the Bluetooth button to enter pairing mode – the icon will flash.
- Pair with “HV3pro” on your device (no password required).
- Once connected, icon will stay solid and a sound will confirm pairing.
- To disconnect, power off Bluetooth manually or move out of range.
- The unit reconnects automatically when the device is back in range.
- Controls: + / - for volume, play/pause button for music.

5.9 White Noise

- Press the white noise button to toggle through:
1) Rainforest 2) Sea Wave 3) Wind 4) Off

5.10 Brightness Adjustment

- Short press the brightness button to cycle through:
Bright / Dim / Display Off

5.11 USB-C Charging

- One Type-C port available. Max output: 5V / 1A.
- Only functional when connected to mains power.



Instructions

5.12 Wireless Charging

- Wireless charging icon appears when active.
- If flashing, remove any objects (e.g. metal) from the charging pad.
- Max wireless output: 15W.
- Icon disappears when charging is complete.

5.13 Battery Mode

- Wireless and USB-C charging are disabled.
- Power-saving mode activates after 10 seconds of inactivity.
- Low battery is indicated by flashing icon and warning tone.
- Reconnect the power adaptor to resume full function.

6. Maintenance and Cleaning

- Always unplug the unit before cleaning.
- Wipe with a soft, dry cloth only.
- Do not use water, solvents, or abrasive cleaners.

7. Disposal

- Do not dispose of this product with regular household waste. Take it to an appropriate electronic waste collection facility in accordance with local regulations.

Troubleshooting

1. Clock Not Turning On

- Check power connection or battery charge.
- Hold power button for 3 seconds.

2. Alarm Not Working

- Ensure alarm icon is on and time is set.
- Check volume and power.

3. Bluetooth Not Pairing

- Enable Bluetooth and stay in range.
- Confirm pairing mode (symbol flashing).
- Reset with Bluetooth button or remove "HV3pro" and retry.

4. Wireless Charging Not Working

 
- Ensure device supports Qi and no case/metal blocks signal.
- Check power; flashing icon may mean interference.

5. Dim or No Display

- Adjust brightness.
- Check power or battery mode.

6. Buttons Unresponsive

- Check correct mode is active.
- Wait or restart if needed.

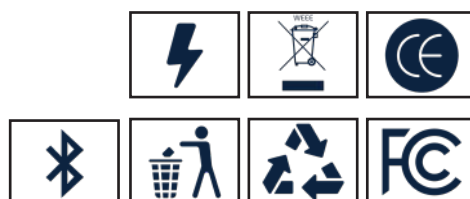



Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com