


UK SKU: CF00141

www.decotel.com

EU SKU: CF00141E

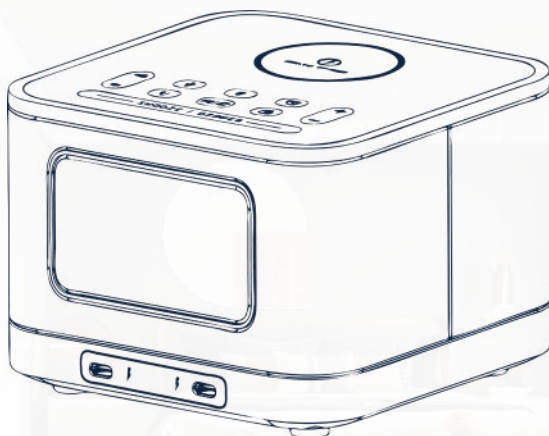

INSTRUCTIONS

Lua Alarm Clock

Réveil Radio
Radiowecker
Radio Despertador



Please read these instructions carefully before use

Content

03 – 09 EN - Instructions for use

Features

Power: AC 100–240V, 50/60Hz, DC 9V/2A

Dimensions: 135 × 135 × 80 mm

Display: 3.5" LCD, multi-level dimmable

Wireless Charging: 15W fast

Ports: Dual Type-C (PD fast), 1 × USB-A, 1 × AUX-IN

Bluetooth Distance: 10 m


Battery: 1200 mAh lithium (backup for clock & alarms)

Functions: Bluetooth music, hands-free calls, FM radio, AUX, USB playback, dual alarm & snooze

Control: Manual buttons, IR remote compatible

Speaker: High-quality system

Details

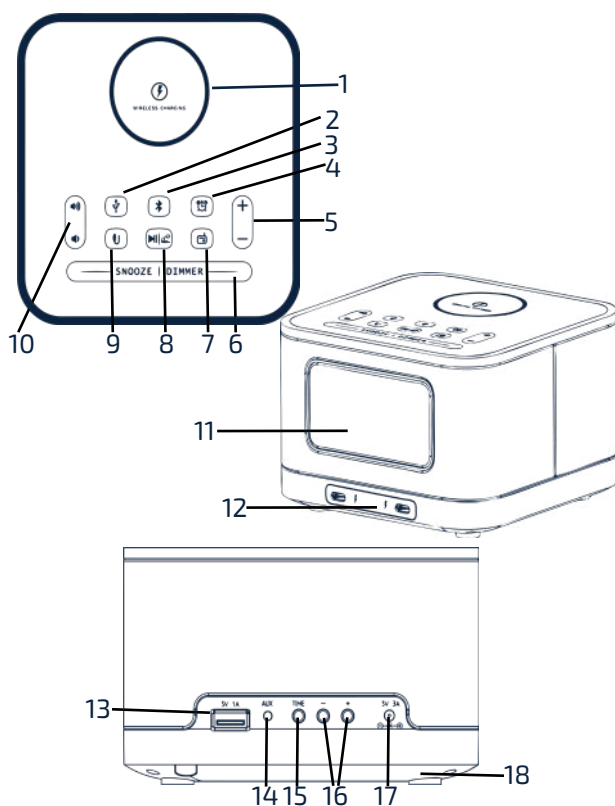

- | | |
|--|-----------------------------|
| 1. wireless charging zone | 10. volume up / down |
| 2. usb mode | 11. led display screen |
| 3. bluetooth mode | 12. type-c charging |
| 4. alarm setting on / off | 13. usb play / charge |
| 5. next song / adjust alarm | 14. aux input |
| 6. snooze, led dimmer | 15. time setting |
| 7. fm mode | 16. time setting + / - |
| 8. play / pause / answer phone / scan fm | 17. power |
| 9. aux in mode | 18. back-up lithium battery |

Instructions

1. Introduction

Thank you for choosing the Lua Alarm Clock. This multifunctional device combines a high-quality Bluetooth speaker, dual alarm clock, wireless fast charging, and FM radio. Please read this manual carefully before use to ensure safe and correct operation.

2. Before First Use

- Place the clock on a stable, flat surface near a mains socket.
- Connect the supplied power cable (AC 100–240V, 50/60Hz, DC 9V 2A).
- Ensure the backup battery is installed for memory retention during power outages.
- Keep the device away from water, heat sources, and direct sunlight.
- Do not cover the device or block ventilation.

3. Important Safety Notes

- Risk of electric shock – do not open the cover; no user-serviceable parts inside.
- Keep away from water or moisture; do not place vases or liquids on the device.
- Fully insert plugs and protect the power cable from being pinched or walked on.
- Only use attachments/accessories specified by the manufacturer.
- Unplug during lightning storms or when unused for extended periods.
- Do not expose to extreme cold or heat.
- Clean only with a dry cloth.
- Keep out of reach of children.

4. User Instructions

4.1 Power On

- Connect the power cable to the back of the clock and plug into a mains socket.
- The 3.5" LCD screen will illuminate.



Instructions

4.2 Set Time

- Press TIME; hour and minute digits will flash.
- Use + / – to adjust hours, press TIME to confirm.
- Use + / – to adjust minutes, press TIME to confirm.
- Press TIME during hour selection to switch between 12-hour and 24-hour format.

4.3 Set Alarm(s)

- Press ALARM when alarm is off.
- Adjust time with + / –, press ALARM to confirm.
- Repeat for a second alarm if needed.

4.4 Alarm Functions

- Active alarms show a flashing icon.
- Press SNOOZE to silence for 9 minutes.
- Press ALARM to stop completely.
- Alarm sounds for up to 30 minutes if unattended.

4.5 Bluetooth Music / Hands-Free

- Press MODE to select Bluetooth.
- Enable Bluetooth on your mobile and select HS1-PD Alarm Clock.
- Play music, control via PLAY/PAUSE, NEXT, PREV.
- Press CALL to answer or end calls.

4.6 FM Radio

- Press MODE to select FM.
- Hold SCAN to auto-scan 87.5–108 MHz.
- Use + / – to change stations manually.

4.7 USB Playback & Charging

- Insert a USB drive to play music.
- The USB port can charge mobile devices.

4.8 Wireless Charging

- Place a compatible device on the pad.
- Avoid metal objects or thick cases between device and charger.
- Remove device when fully charged.

Instructions

4.9 Display & Brightness

- Adjust brightness using DIMMER.
- Screen dims automatically when idle.

4.10 IR Remote Control (Optional)

- Install 3 × AAA batteries.
- Use remote to adjust time, alarms, volume, and modes.
- Align with the clock for syncing.

4.11 Reset Device

- Unplug or press RESET to restore factory defaults.

4.12 Battery Backup

- Retains time and alarm settings during power outages.

5. Maintenance and Cleaning

- Wipe with a dry or slightly damp cloth.
- Do not use abrasive cleaners or chemicals.
- Keep the device dry and away from extreme temperatures.
- Ensure ventilation is not blocked.

7. Disposal

- Do not dispose of this product with regular household waste. Take it to an appropriate electronic waste collection facility in accordance with local regulations

Troubleshooting

1. No Power / Display Off

- Check the mains connection.
- Ensure power cable is fully inserted.

2. Alarm Does Not Sound

- Verify alarm is turned on.
- Check alarm time is set correctly.

3. Bluetooth Not Connecting

- Ensure Bluetooth is enabled on your mobile.
- Ensure clock is in pairing mode and within 10 m.
- Disconnect and reconnect if needed.

4. FM Radio Poor Reception

- Adjust antenna position.
- Keep device away from other electronics to reduce interference.

5. Wireless Charging Not Working

- Ensure device is compatible and correctly positioned.
- Remove thick cases or metal objects.
- Disconnect USB charging if using wireless simultaneously.

6. Screen Dim / Not Visible

- Adjust brightness using DIMMER.
- Check power supply and connection.

7. Device Overheating

- Ensure adequate ventilation.
- Do not cover the device while operating.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com