


UK SKU: CX00010

EU SKU: CX00010E

www.decotel.com

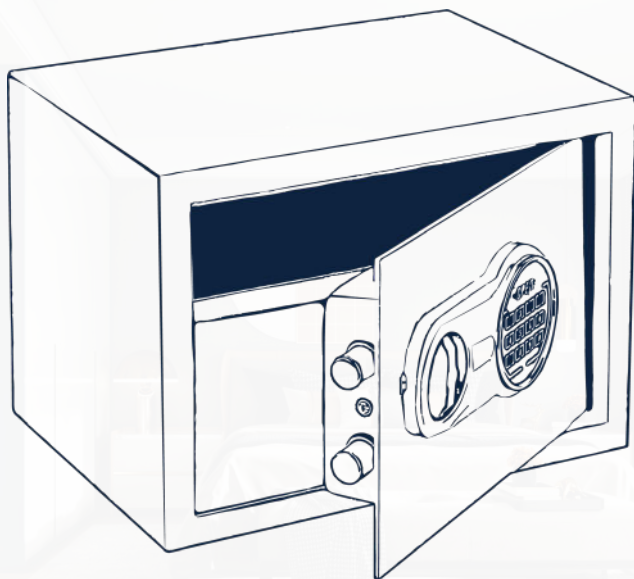

INSTRUCTIONS

Esher Hotel Bedroom Safe

Coffre-fort Pour Chambre d'Hôtel

Tresor für das Hotelzimmer

Caja Fuerte de Habitación de Hotel



Please read these instructions carefully before use

Content

03 – 07 EN - Instructions for use

Features

Mechanical Lock: 3–8 digit code with LCD or indicator display

Steel Build: 4 mm door, dual 20 mm bolts

Compact Design: Ideal for smaller valuables

Battery-Powered: 4 x AA (1.5V) batteries

Easy Install: Pre-drilled holes with fixings

Interior: Protective floor mat


Ex Dims: 200 x 310 x 200 mm

Int Dims 140 x 308 x 198 mm

Black Steel

Weight: 5.5 Kg

Details

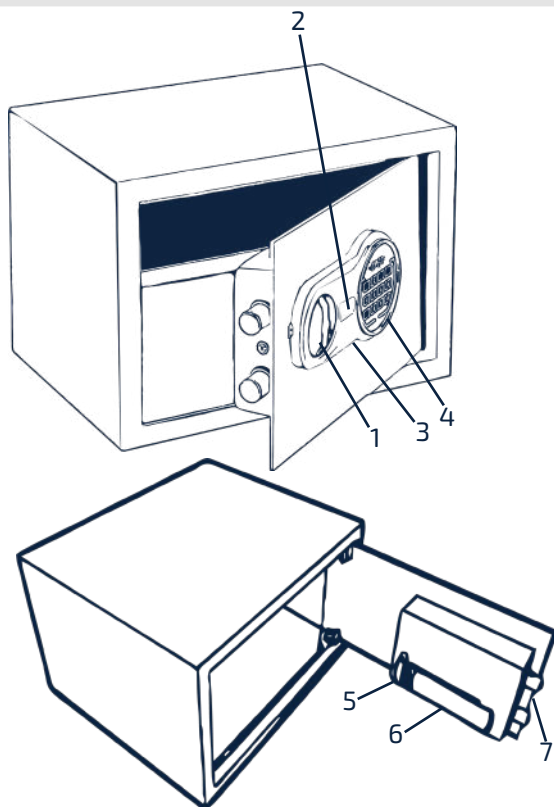

- 1. slide knob
- 2. emergency lock cover
- 3. USB port for emergency power supply (type-c)
- 4. LCD screen
- 5. reset button
- 6. battery compartment
- 7. bolts

Instructions

1. Introduction

- Thank you for choosing the Esher Bedroom Safe.

This secure, easy-to-use unit is designed to protect your valuables during hotel stays.

Please read these instructions carefully before use.

2. Before First Use

2.1 Opening and Power

- Use the emergency key to open the safe for the first time.
 - Remove the lock cover.
 - Insert the key and turn it anticlockwise.
 - Slide the knob to the right to open.
 - Remove the key and store it securely (do not store inside the safe).
- Insert 4 x AA batteries into the compartment inside the door.
- If “L-BAT” appears on the screen, replace with 4 fresh AA batteries.

2.2 Mounting Instructions

- Choose a flat, dry, secure location (floor, shelf, or wall).
- If wall mounting, ensure the safe is supported underneath.
- Mark the position of the two mounting holes at the back or base of the safe.
- Drill holes approx. 50 mm deep.
- Align the safe and insert the expansion bolts (included), then tighten securely.

3. Important Safety Notes

- Install on a flat, dry, secure surface.
- When wall-mounting, ensure the safe rests on a supporting surface (e.g. floor or shelf).
- Do not exceed three incorrect code entries. After 3 errors, a 20-second alarm sounds. A further 3 errors will lock the system for 5 minutes.
- During lockout, only the emergency key can

Instructions

override the alarm and unlock the safe.

4. Usage Instructions

4.1. Opening the Safe

- Enter the user code (default: 1234) or master code (19980818) and press #.
- If successful, “-OPEN-” appears. Slide the knob to the right to open.
- If incorrect, “-Error-” appears and a beep sounds.

4.2 Closing the Safe

- Close the door. Slide the knob to the left until locked.

4.3 Change User Code

- With the door open, press the reset button once.
- Enter a new 3–8 digit code and press # to confirm.
- Screen will display “-Into-” and repeat your new code.
- Press * to delete the last digit if needed.
- If inactive for 10 seconds, setup is cancelled.

4.4 Change Master Code

- With door open, press 0 twice, then reset.
- Enter 3–8 digit code and press #.
- “-Into-” confirms success.

4.5 Hide Code Entry

- Press * before entering code to hide digits.
- Press * again for future entries if desired.

5. Maintenance and Cleaning

- Wipe exterior with a dry, soft cloth.
- Avoid moisture or harsh cleaners.
- Replace batteries when low.
- Store emergency key outside the safe.

Troubleshooting

1. Safe Will Not Open

- Check and replace batteries.
- Re-enter code carefully.
- Use emergency key if locked out.

2. Alarm Sounding

- 3 incorrect codes = 20-sec alarm.
- 6 incorrect codes = 5-min lockout.
- Use emergency key and remove batteries to reset.

3. "L-BAT" Message

- Low battery. Replace all 4 AA batteries.

4. Keypad Unresponsive

- Check battery placement and polarity.
- Remove and reinsert batteries.
- Contact distributor if issue continues.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com