


UK SKU: CX00015

EU SKU: CX00015E

www.decotel.com

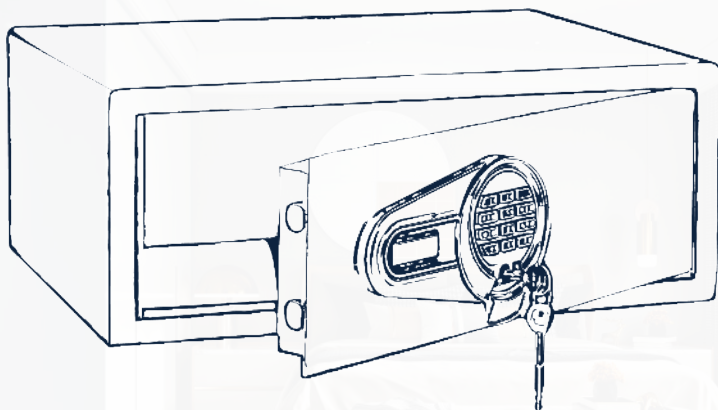

INSTRUCTIONS

Enfield Hotel Bedroom Safe

Coffre-fort Pour Chambre d'Hôtel

Tresor für das Hotelzimmer

Caja Fuerte de Habitación de Hotel



Please read these instructions carefully before use

Content

03 - 07 EN - Instructions for use

Features

Guest Access: 4–6 digit PIN with auto-lock after failed attempts

Spacious Interior: Fits laptops and larger valuables

Secure Build: 4 mm steel door, dual 20 mm locking bolts

User-Friendly: Motorised lock with LED display

Safety Backup: 200-entry audit trail + mechanical override

Power: 4 x 1.5V AA batteries

Install Options: Wall or closet (fixings included)

Protective Detail: Soft floor mat included



Ex Dims: 370 x 508 x 200 mm

Int Dims 320 x 505 x 197 mm

Black Steel

Weight: 12.5 kg

Details

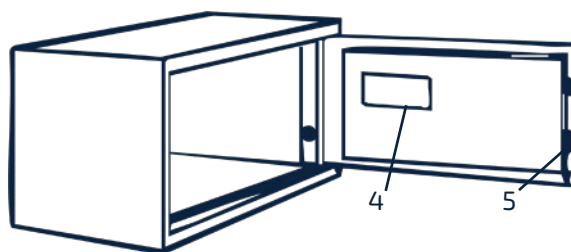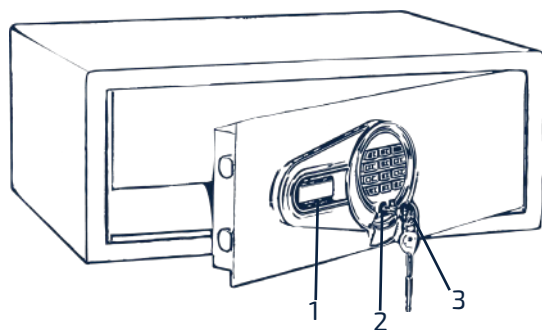

- 1. display
- 2. USB port
- 3. emergency key / cover
- 4. battery compartment
- 5. bolts

Instructions

1. Introduction

- Thank you for choosing the Enfield Bedroom Safe.

Designed to keep valuables secure, this safe features digital access, emergency override, and optional code concealment.

Please read this manual thoroughly before use.

2. Before First Use

- Open the safe using the emergency key (see Section 4).
- Insert 4 x AA batteries into the battery compartment.
- The factory master code is 011223.
- Do not store the emergency keys inside the safe.

3. Important Safety Notes

- Only use 4 x AA batteries. Do not mix new and used batteries.
- Replace all batteries at once when low ("BA - L" appears on display).
- Keep the emergency key in a secure location outside the safe.
- Mount the safe on a secure, stable surface (wall or shelf).
 - To fix the safe in place:
 - Mark and drill holes in your chosen location.
 - Align the safe and insert the included expansion bolts.
 - Tighten bolts securely.

4. Usage Instructions

4.1. Opening with Emergency Key

- Remove the emergency key cover.
- Insert key and turn to open the door.

4.2 Using Personal Code

- Enter a 4–6 digit code, then press # to lock the safe. "CLOSE-" appears.
- To open, enter the same code. "-OPEN-" then "OPENED" appears.

Instructions

4.3 Changing Personal Code

- With the door open, enter any new 4–6 digit code.
- Close the door to activate the new code.

4.4 Using Master Code

- Enter the 6-digit master code (default: 011223) to open.
- Display will show “-OPEN-” then “OPENED”.

4.5 Changing Master Code

- With door open, press * twice – “PROG” appears.
- Enter the current master code – “NEW” appears.
- Enter a new 6-digit code – “AGAIN” appears.
- Enter the same new code again – “DONE” confirms success.

(Note: Avoid using common codes like 751019 or 123456.)

4.6 Code Concealment (Hide Function)

- Press * before entering a code to hide digits.
- Hidden digits appear as “-”.
- Hiding resets after 5 seconds of inactivity.

4.7 Security Lockout

- After 5 incorrect code entries, the keypad locks for 15 minutes.
- “HOLD15” displays during lockout.

5. Maintenance and Cleaning

- Use a soft, dry cloth to clean the surface.
- Keep the keypad and battery compartment free from dust and moisture.
- Replace batteries promptly when low.

Troubleshooting

1. Safe Will Not Open

- Ensure correct code is entered.
- If locked out, wait 15 minutes.
- Use emergency key if needed.

2. Keypad Not Responding

- Check battery level and connections.
- Replace all 4 AA batteries with new ones.

3. "BA - L" Displayed

- Batteries are low. Replace immediately.

4. Code Not Accepted

- Try again with correct code.
- If "ERROR" appears during master code setup, repeat the process.

5. Mounting Issues

Ensure bolts are tightened securely and drilled to the correct depth (approx. 50 mm).





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com