


UK SKU: CX00025

www.decotel.com

EU SKU: CX00025E

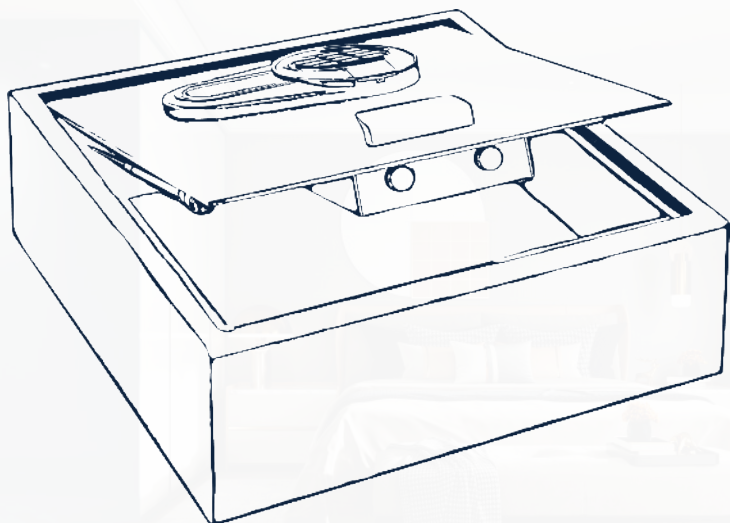

INSTRUCTIONS

Ely Top Opening Hotel Bedroom Safe

Coffre-fort Pour Chambre d'hôtel à Ouverture Par le Haut
Tresor Mit Öffnung Nach Oben für Das Hotelzimmer
Habitación de Hotel con Apertura Superior



Please read these instructions carefully before use

Content

03 - 07 EN - Instructions for use

Features

Guest-Friendly Access: 4–6 digit PIN code with tamper lockout

Top-Opening Design: Ideal for drawers and compact spaces

Secure Build: 4 mm steel door, 20 mm dual locking bolts

Smart Control: Motorised lock with LED display

Reliable Operation: 200-entry audit trail and override option

Power: 4 x 1.5V AA batteries

Installation: Wall or base fixings included

Security Lockout: Lockout for 15 minutes after 3 failed attempts


Black Steel

Ex Dims: 350 x 400 x 145 mm

Int Dims 346 x 396 x 85 mm

Weight: 11 kg

Details

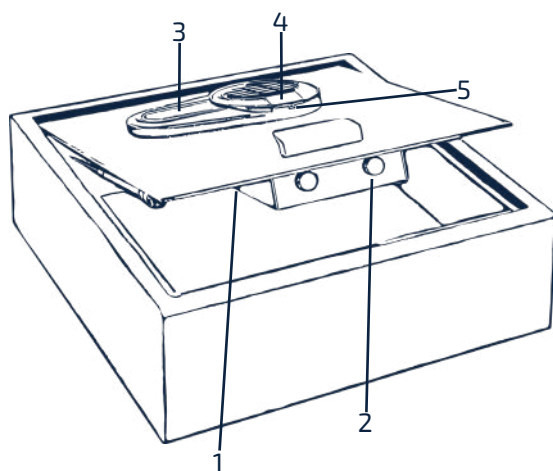

- 1. battery compartment
- 2. bolts
- 3. display
- 4. emergency key cover
- 5. USB port

Instructions

1. Introduction

- Thank you for choosing the Ely Top Opening Safe

Designed to keep your valuables secure and easily accessible, this safe features personal and master code access, an emergency override key, code concealment, and automatic lockout for added security.

Please read this manual thoroughly before use.

2. Before First Use

- Open the safe using the emergency key (see Section 4).
- Insert 4 x AA batteries into the battery compartment (see rear of door).
- The factory master code is 011223.
- Do not store the emergency keys inside the safe.

3. Important Safety Notes

- Only use 4 x AA batteries. Do not mix old and new batteries.
- Replace all batteries at the same time when low ("BA - L" appears on display).
- Keep the emergency key in a secure place outside the safe.
- Mount the safe on a flat stable surface using suitable fixings.
- To fix the safe in place:
 - Mark and drill holes in the desired location.
 - Align the safe and insert the bolts.
 - Tighten bolts securely (recommended depth: 50 mm).

4. Usage Instructions

4.1. Opening with Emergency Key

- Remove the emergency key cover.
- Insert the key and turn to open the door.

4.2 Using a Personal Code

- With the door open, enter any 4–6 digit code.

Instructions

- Close the door—"CLOSE-" will appear and the safe will lock.
- To open: enter the same code. "-OPEN-" then "OPENED" will display.

4.3 Changing Personal Code

- Keep the door open.
- Enter a new 4-6 digit code.
- Close the door to set the new code.

4.4 Using the Master Code

- Enter the 6-digit master code (default: 011223) to unlock.
- Display will show "-OPEN-" then "OPENED".

4.5 Changing the Master Code

- With the door open, press * twice — "PROG" appears.
- Wait for "PROG" to disappear, then enter the current master code — "NEW" appears.
- Enter a new 6-digit code — "AGAIN" appears.
- Re-enter the same code — "DONE" confirms success.
- (If "ERROR" appears, the code change failed — repeat the process.)
- Avoid simple codes like 751019 or 123456.

4.6 Code Concealment (Hide Function)

- Press * before entering the code to hide digits.
- Digits display as "-" while typing.
- Hiding resets after 5 seconds of inactivity or once input is completed.
- Code will not show on re-entry unless * is pressed again.

4.7 Security Lockout

- After 5 incorrect code entries, the system locks for 15 minutes.
- "HOLD15" displays if keys are pressed during this time.

5. Maintenance and Cleaning

- Use a soft, dry cloth to clean the surface.
- Keep the keypad and battery compartment free from dust and moisture.
- Replace batteries immediately when "BA - L" appears.
- The safe enters low-power mode automatically to preserve battery life.

Troubleshooting

1. Safe Will Not Open

- Ensure code is correct.
- If locked out, wait 15 minutes.
- Use emergency key if necessary.

2. Keypad Not Responding

- Replace all 4 AA batteries.
- Make sure batteries are inserted the right way around.

3. "BA - L" Displayed

- Batteries are low—replace all 4 immediately.

4. Code Not Accepted

- Try again with correct code.
- For master code setup, if "ERROR" appears, repeat the process.
- Avoid using invalid function codes.

5. Mounting Issues

- Use proper fixings and drill holes approx. 50 mm deep.
- Ensure the safe is secured on a flat surface.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com