


UK SKU: CA00992

www.decotel.com

EU SKU: CA00992E

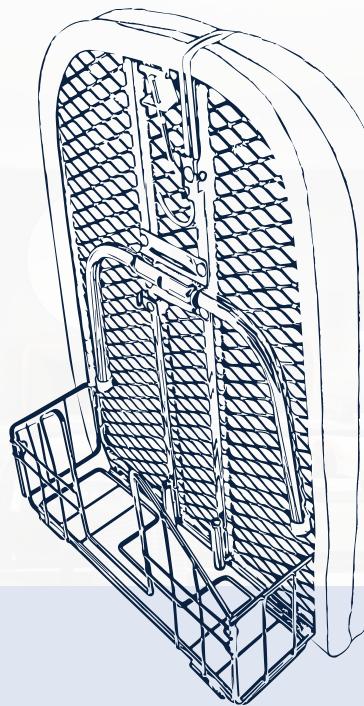

INSTRUCTIONS

Folding Tabletop Ironing Board

Planche à Repasser de Table

Klappbares Tischbügelbrett

Tabla de Planchar Plegable Para Mesa



Please read these instructions carefully before use

Content

03 - 07

EN - Instructions for use

Features

Dimensions Open: 813 × 305 × 170 mm
(32" × 12" × 6.7")

Dimensions Folded: 400 × 310 × 55 mm
(15.7" × 12.2" × 2.2")

Weight: 2.0 kg

Mesh surface with felt padding

Metallic cotton cover

Powder-coated frame

Lever lock & fold-down legs


Iron basket & hanging hook

Safety lock

Compact fold-flat design

Supplied in non-woven bag

Details

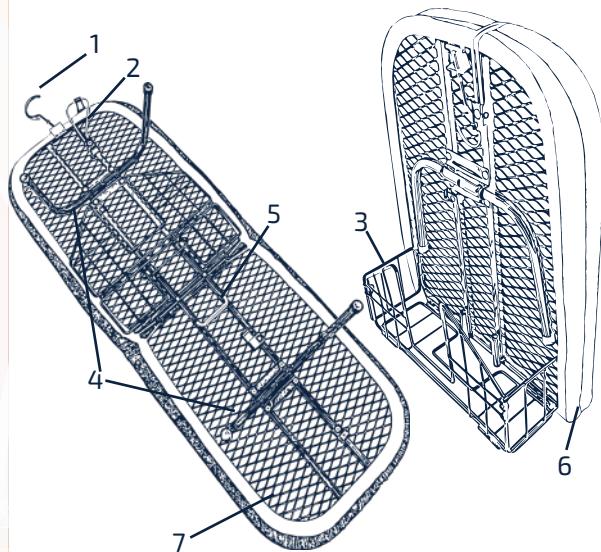

1. hanging hook
2. safety lock
3. iron basket
4. folding legs
5. lock mechanism
6. ironing board cover
7. ironing board frame

Instructions

1. Introduction

Thank you for choosing the Decotel Folding Tabletop Ironing Board. This compact and portable ironing board is designed for hotel rooms and hospitality environments, providing:

- Space-saving design: Folds neatly for easy storage.
- Sturdy construction: Stable for safe and efficient ironing.
- Guest-friendly use: Quick setup and straightforward operation.
- Compatibility: Suitable for most irons, including Decotel Steam and Dry Irons.


Please read this manual carefully before use to ensure safe and effective operation.

2. Before First Use

- Remove the ironing board from its storage bag.
- Check that the board and cover are in good condition, without tears or damage.
- Ensure all parts, including the legs, locking hook, and iron basket, are intact and functional.
- Wipe the board surface and cover with a clean, dry cloth if needed.

3. Important Safety Note

- Only use the ironing board on a stable, level surface.
- Keep the board away from water or wet areas to prevent slipping and electric hazards.
- Do not overload the board; it is designed for standard household and hotel irons only.
- Ensure the locking hook is fully engaged before ironing to prevent collapse.
- When not in use, fold and store the board safely to avoid trips or falls.
- Keep children away from the ironing board during setup, use, and storage.

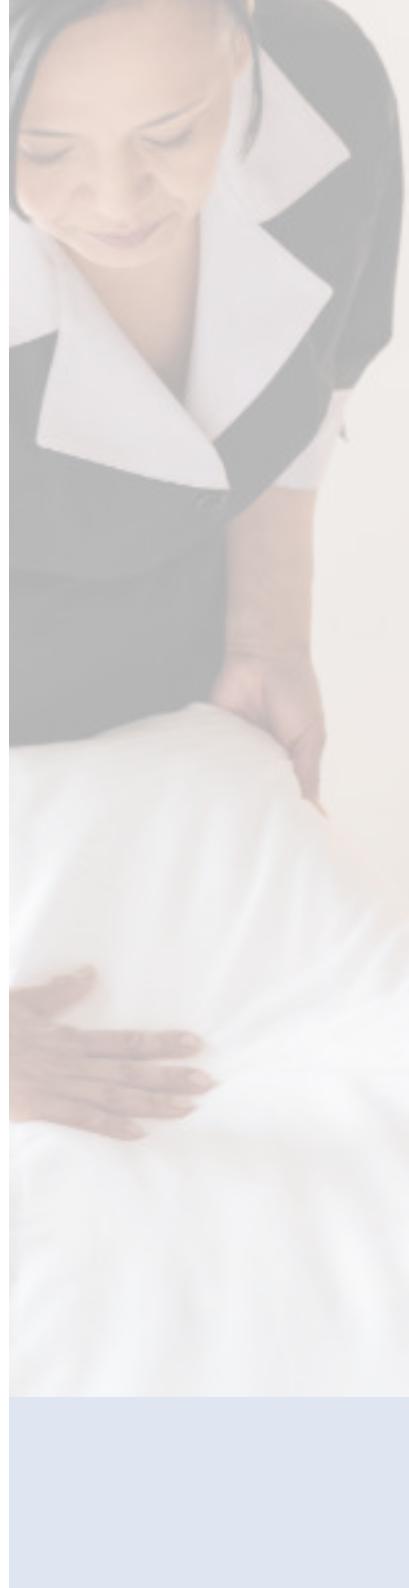

Instructions

4. Usage Instructions

Setting Up the Board

1. Remove the board from its storage bag.
2. Unhook the safety locking hook.
3. Unfold the board completely.
4. Fold down the legs and slot the lever into place to lock the board.
5. Turn the board over so that it rests stably on the legs.
6. Check stability before placing the iron on the board.

Folding and Storing the Board

1. Reverse the setup steps to fold the board: fold legs, release locking lever, fold the board.
2. Slot all parts neatly together.
3. Store the board in its non-woven bag or hang it using the built-in hook in a wardrobe or rail.

Iron Basket Setup

1. Unfold the ironing basket.
2. Insert the left-hand and right-hand brackets into the central basket section.
3. Ensure all parts slot into place securely.
4. Place the iron inside the basket for storage.

General Use Tips

- Ensure the ironing board cover is smooth and intact.
- Use caution when placing hot irons on the board; always set down on a heat-resistant surface.
- After use, allow the board and iron to cool before folding and storing.

5. Maintenance and Cleaning

- Wipe surface and legs with dry or damp cloth.
- Hand wash the cover only.
- Check locks and moving parts regularly.
- Store in a dry place.
- Avoid abrasive cleaners/chemicals.

Troubleshooting

1. Board Wobbles or Feels Unstable

- Ensure the legs are fully extended and the locking lever is engaged.
- Check that the board is on a flat, level surface.

2. Legs Will Not Lock

- Make sure the safety hook is unhooked before folding out the legs.
- Check for obstructions or debris in the locking mechanism.

3. Iron Basket Parts Misaligned

- Reinsert the left and right brackets carefully into the central basket section.
- Ensure all parts slot fully into place before placing the iron inside.

4. Board Does Not Fold Smoothly

- Confirm the lever is fully released before folding.
- Check for bent or obstructed components.

5. Cover Damage or Wear

- Replace the ironing board cover (Decotel folding ironing board cover: CA00959) if torn or worn to maintain smooth ironing and avoid snagging clothes.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com