

UK SKU: CB00035
EU SKU: CB00035E

www.decotel.com



INSTRUCTIONS

Sofia High-Speed Hairdryer

Sèche-Cheveux Haute Vitesse
Hochgeschwindigkeits-Haartrockner
Secador de Pelo de Alta Velocidad



Please read these instructions carefully before use

Content

03 - 07 EN - Instructions for use

Features

1600W

220–240V, 50/60Hz

High-speed brushless motor – 110,000 rpm

Approx. 545g (EU) – 581g (UK)

243L × 140W × 73H mm *(with concentrator)*

243L × 95W × 73H mm *(without concentrator)*

2 speed settings

4 temperature settings

4-colour LED ring

Ionic function

Reverse-airflow self-cleaning mode


Auto shut-off

Magnetic styling concentrator

3.0m cable

Graphite colour

Details

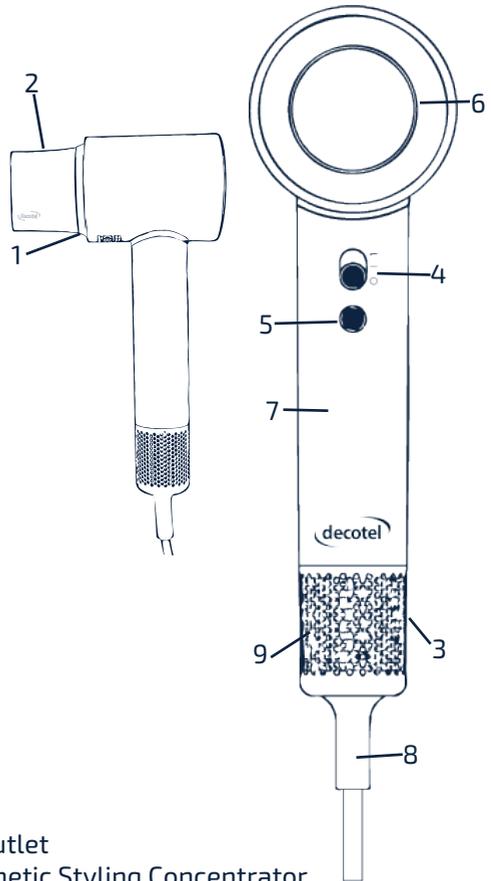

1. Air Outlet
2. Magnetic Styling Concentrator
3. Removable Filter
4. On/Off Power Slider
5. Temperature Button
6. LED Ring Indicator
7. Handle
8. Anti-Kink Cable Protection
9. Air Inlet

Instructions

1. Introduction

- Designed for rapid drying and professional styling in hospitality settings
- Ideal for guest bathrooms, suites, and spa facilities
- High-speed brushless motor delivers fast drying with reduced noise
- Multiple airflow and heat options suit all hair types
- Reverse-airflow self-cleaning helps maintain optimal performance

2. Before First Use

- **Inspect the Power Cable & Plug** — Do not use if damaged.
- **Clean the Filter & Outlet** — Wipe dust from transport with a dry cloth.
- **Test Settings** — Briefly test both speeds and all 4 temperatures to confirm normal operation before using on hair.

3. Important Safety Notes

- Use only as described in these instructions.
- Suitable for users aged 8+ and for persons with reduced physical, sensory, or mental capabilities if supervised or instructed on safe use.
- Children must not play with the device or perform cleaning/maintenance unsupervised.
- Keep away from bathtubs, showers, basins, and all water sources; never immerse in water. If dropped into water, isolate power at the fuse box before unplugging.
- Unplug after every use, especially in bathrooms. An RCD (≤ 30 mA) is recommended for bathroom circuits.
- Do not operate if the appliance, plug, or cord is damaged; do not twist, pull, or wrap the cord tightly.
- Do not block the air inlet or outlet; obstruction may cause overheating.
- Do not use near flammable aerosols or vapours.
- Surfaces around the outlet and nozzle can become hot—avoid contact during and immediately after use.

Instructions

- Do not attempt to disassemble or repair; contact a qualified technician

4. Usage Instructions

4.1 Towel dry hair before use.

4.2 Ensure hands and floor are dry.

4.3 Attach the magnetic styling concentrator (align and let it click into place).

4.4 Slide the On/Off power control up to turn on. The first position starts Speed 1 (Low); slide up again for Speed 2 (High).

4.5 Press the Temperature Button to cycle sequentially through 4 temperatures:

- Level 1: Cool
- Level 2: Low heat
- Level 3: Medium heat
- Level 4: High heat

4.6 Style as desired, using Speed 2 and the concentrator for precision work.

4.7 Cool finish option: Select Cool to set the style and add shine.

4.8 Reverse airflow self cleaning: With the dryer OFF, press and hold the Temperature Button, then slide the power on and keep holding for ~3 seconds to enter cleaning mode. The motor reverses for ~8 seconds; the LED flashes during the cycle, then the unit shuts off.

4.9 Auto shut off: If the device overheats, it will stop automatically. Allow it to cool and ensure vents are clear before restarting.

4.10 Slide power to OFF, unplug, and place on a heatproof surface to cool before storage.

 
Instructions

5. Cleaning & Maintenance

- Unplug and allow to cool completely.
- Remove the rear filter regularly; use a soft brush or dry cloth to clear lint and dust. Do not wash the stainless steel filter under water.
- Wipe the housing with a soft, dry cloth only. Do not use alcohol, solvents, or abrasive cleaners.
- After cleaning, align the filter and rotate to click it securely into place.
- If the power cord is damaged, it must be replaced by the manufacturer or a qualified service partner.

6. Disposal

Dispose of the appliance responsibly according to local electronic waste regulations. Contact your local authority or municipal waste service for collection and recycling guidance.



Troubleshooting

1. No power / won't start

- Check the plug is fully inserted.
- Confirm the socket is live.
- Allow 1 minute and retry if thermal protection has activated.

2. Weak or no airflow

- Ensure air inlet/outlet is not blocked.
- Clean the rear filter.

3. Sudden shut-off / overheating

- Over-temperature protection may have triggered.
- Allow to cool fully, then restart.
- Avoid rapid repeated switching.

4. No heat / incorrect temperature

- Cycle the temperature button through all 4 settings.





Decotel Ltd
Loughborough, United Kingdom
T: +44 (0)1509 264 422
E: sales@decotel.com

Decotel Europe SL
Valencia, Spain
T: +34 961 21 37 43
E: sales-eu@decotel.com